

**BATTLEMENT DEFENSE**

**BATTLEMENT SECURITY POST WITH COVER**

**WARNINGS**

To ensure your safety, COMPLETELY read and follow this safety manual and ALL warning labels BEFORE assembling, installing or utilizing this product.

DO NOT USE THIS PRODUCT BEFORE FULLY UNDERSTANDING ALL SAFETY WARNINGS AND INSTRUCTIONS. IF YOU HAVE QUESTIONS, ARE UNSURE ABOUT ANY INFORMATION OR NEED ADDITIONAL INFORMATION CONCERNING YOUR PRODUCT, CONTACT OUR CUSTOMER SERVICE TEAM [INFO@BATTLEMENTDEFENSE.COM](mailto:INFO@BATTLEMENTDEFENSE.COM). KEEP AND MAINTAIN THIS SAFETY AND INSTRUCTION MANUAL IN A SAFE LOCATION FOR FUTURE REFERENCE.

**ASSEMBLE SECURITY POST FRAME AND COVER**

**Parts List:**

- 2 wind bars (25" flat bars)
- 1 bottom bar (with hooks)
- 2 straight bars (with brackets)
- 1 cover
- 8 1-1/2" pan head screw with matching nut
- 4 1-3/4" hex head screw with matching nut
- 2 angled bars
- 1 top bar (no hooks)
- 1 cross bar

**Step 1 - Lay out cover**

Lay out cover with hook and loop section facing up. Undo all the hook and loop portions.

**Step 2 - Assemble frame**

The bottom bar with hooks should be placed so it aligns with the bottom of the cover. Hooks should face away from the cover. Assemble remaining bars by connecting matching numbered ends. The numbers must be on same side. (See Figures 1-3)

**WARNING: The round part of the screws must be on the outside of the frame and the thread of the screws must face inward. Tighten nuts onto screws, do not overtighten.**

**NOTE:** Do not forget to attach wind bar to frame. (See Figure 2)

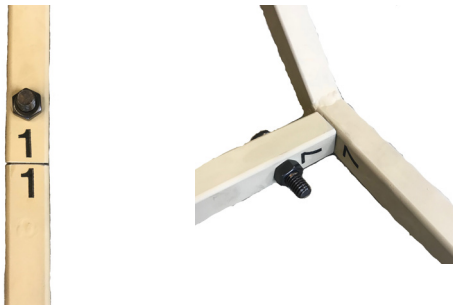


Figure 1



Figure 2

Figure 3

**Step 3 - Secure cover to frame**

Align the frame brackets with the top edge of the flap on the lower side of the cover. The bottom side flap should be secured under the bracket. (See Figure 4)



Figure 4

Work upward securing both sides of the cover at the same time. Ensure cover is aligned and that the cover is centered and pulled tight.

Secure the top of the cover by first aligning the slot for wind bar. (See Figure 5)



Figure 5

**Step 4 - Secure Cover**

Readjust cover and ensure cover is pulled tight and evenly over frame.

**INSTALL OVERHEAD COVER ON PLATFORM**

Step 1 - With two person carry, one on each long side of cover. Lift the cover.

Step 2 - Align the hooks between the joists mounting the hooks to the bottom railing.

Step 3 - Rotate cover into vertical position so that brackets align with available railing post hole. Insert hardware and tighten.

**WARNING: DO NOT OVERTIGHTEN. The nut should be snug, over torquing may cause damage to tube.**

Step 4 - Ensure wind bars are rotated in a vertical position. Align the bottom of the wind bar with either the rearmost or forward most hole on the maxilla. Insert hardware and tighten.

**To uninstall overhead cover, perform assembly procedures in reverse.**

**PROPER CARE AND MAINTENANCE**

Follow instructions when assembling and disassembling. Inspect for defects (damage, rot, corrosion, cracks, etc.) before every use is required. Do not use if damage is detected or suspected.

Inspect for rust. If found, treat and coat area with lubricant.